


MECHANICAL JOINT PIPE

For Generations

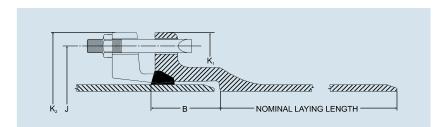

Pipe Size	Pipe Thickness In.		Outside Diameter	*Dimensions In.				Bolts		Bell Weight	Gland** Bolts Gasket	
ln.	From	То	ln.	В	J	K1	K2	No.	Size In.	Length In.	Lb.	Weight Lb.
3	.25	.40	3.96	2.50	6.19	7.62	7.69	4	5/8	3	11	7
4	.26	.41	4.80	2.50	7.50	9.06	9.12	4	3/4	3-1/2	16	10
6	.25	.43	6.90	2.50	9.50	11.06	11.12	6	3/4	3-1/2	18	16
8	.27	.45	9.05	2.50	11.75	13.31	13.37	6	3/4	4	24	25
10	.29	.47	11.10	2.50	14.00	15.62	15.62	8	3/4	4	31	30
12	.31	.49	13.20	2.50	16.25	17.88	17.88	8	3/4	4	37	40
14	.33	.51	15.30	3.50	18.75	20.25	20.25	10	3/4	4-1/2	61	45
16	.34	.52	17.40	3.50	21.00	22.50	22.50	12	3/4	4-1/2	74	55
18	.35	.53	19.50	3.50	23.25	24.75	24.75	12	3/4	4-1/2	85	65
20	.36	.54	21.60	3.50	25.50	27.00	27.00	14	3/4	4-1/2	98	85
24	.38	.56	25.80	3.50	30.00	31.50	31.50	16	3/4	5	123	105

- * Nominal laying length is 18 ft.
- ** Weight shown for regular grey cast iron follower gland, corton bolts and rubber gasket.

ASSEMBLY INSTRUCTIONS

- Clean the bell socket and spigot or plain end. Lubricate both the gasket and plain end by brushing an approved pipe lubricant.
- Place the gland on the plain end with the lip Step 2. extension toward the plain end. Place the gasket on the plain end with the narrow edge facing the plain end.
- Insert the plain end into the bell and press the Step 3. gasket into the bell recess. Push the gland toward the socket and center it around the pipe with the gland lip against the gasket.
- Insert and tighten the bolts. It is important to Step 4. maintain the same distance between the gland and the bell face at all times. This is best done by alternating side to side and top to bottom, while tightening the bolts.
- Note: Achieving the recommended bolt torque, particularly with large diameter pipe, may require repeating the process up to 5 times or more. Recommended bolt torque ranges are as

Pipe Size In.	Bolt Diameter In.	Nut Across Flats In.	Wrench Length In.	Torque Range Foot Lbs.	
3	5/8	1-1/16	8	45 to 60	
4-24	3/4	1-1/14	10	75 to 90	



ATLANTIC STATES

908-454-1161



CAST IRON PIPE CO. SYSTEMS COMPANY 2266 S. 6th St. Coshocton, OH 43812 183 Sitgreaves St. Phillipsburg, NJ 08865 740-622-6651 atlanticstates.com clowwater.com

CLOW WATER



pscipco.com

PACIFIC STATES **CAST IRON PIPE CO.** 1401 E 2000 S. Provo, UT 84603 801-373-6910







