




For Generations

TYTON[®] JOINT PIPE

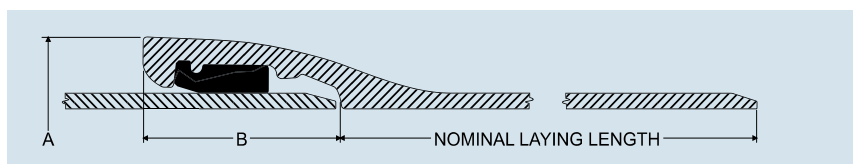

Tyton[®] Joint

Pipe Size In.	Pipe Thickness In.		Outside Diameter In.	*Dimensions In.	
	From	To		A	B
3	.25	.40	3.96	5.80	3.00
4	.25	.41	4.80	7.10	3.15
6	.25	.43	6.90	8.63	3.38
8	.25	.45	9.05	10.94	3.69
10	.26	.47	11.10	13.32	3.75
12	.28	.49	13.20	15.06	3.75
14	.28	.51	15.30	17.80	5.00
16	.30	.52	17.40	19.98	5.00
18	.31	.53	19.50	22.00	5.00
20	.33	.54	21.60	24.12	5.25
24	.33	.56	25.80	28.43	5.50
30	.34	.63	32.00	35.40	6.55
36	.38	.73	38.30	41.84	7.00

*Nominal laying length is 18 ft.

ASSEMBLY INSTRUCTIONS

- Step 1.** Thoroughly clean out the bell with special attention to the gasket recess. Remove any foreign material or excess paint. Clean the spigot or beveled plain end and remove any sharp edges with a standard file.
- Step 2.** After making sure that the correct gasket is being used, insert it into the recess in the bell with the small end of the gasket facing the bell face.
- Step 3.** Apply lubricant to the inside surface of the gasket, making sure that the entire surface is coated. Apply a generous coating of lubricant to the beveled portion of the plain end.
- Step 4.** Guide the plain end into the bell and, while maintaining straight alignment, push the plain end into the bell socket. Once the joint is assembled, necessary deflection can be accomplished. When assembly is complete, the bell face should be aligned between the two white depth rings, for Tyton[®] Joints. Fastite[®] Joints have only 1 assembly stripe.



ATLANTIC STATES CAST IRON PIPE CO.
183 Sitgreaves St.
Phillipsburg, NJ 08865
908-454-1161
atlanticstates.com



CLOW WATER SYSTEMS COMPANY
2266 S. 6th St.
Coshoccon, OH 43812
740-622-6651
clowwater.com



PACIFIC STATES CAST IRON PIPE CO.
1401 E 2000 S.
Provo, UT 84603
801-373-6910
pscipco.com



CANADA PIPE COMPANY ULC
1757 Burlington St. E
Hamilton, ON L8N-3R5
905-547-3251
canadapipe.com



MCWANE CAST IRON PIPE CO.
1201 Vanderbilt Road
Birmingham, AL 35234
205-322-3521
mcwanepipe.com

